

DROP ASA THE SLIM

Contents

- 1 × Drop ASA – THE SLIM
- 2 × M5 screws
- 1 × thin rubber foam plate
- 1 × spare Shroud Mounting Screw O-ring
- 1 × spare ASA O-Ring
- 1 × Instruction manual
- 1 × Quality card

Lieferumfang

- 1 × Drop ASA – THE SLIM
- 2 × M5 Schrauben
- 1 × Moosgummiplatte
- 1 × Ersatz Shroud Mounting Screw O-ring
- 1 × Ersatz ASA O-Ring
- 1 × Bedienungsanleitung
- 1 × Qualitätskarte

Manual

1. Unscrew the screw^[4] on the **Rear Air Plug**^[3] and remove the **Rear Air Plug**^[3] as well as the original **Rear Plate**^[2].
2. Take out the two screws on the inside of the **T15 Lower Receiver** that connect the original **Rear ASA** with the Receiver.
ATTENTION! On the inside of the original **Rear ASA** you will find the **Shroud Mounting Screw O-ring**^[6]. Do not lose it.
3. Put the **Shroud Mounting Screw O-ring**^[6] into the **Drop ASA – THE SLIM**^[7].
4. Put the **Rear Plate**^[2] and the **Rear Air Plug**^[3] back in. (Step 1)
5. Place the thin foam rubber plate^[5] between **Rear Plate**^[2] and **Drop ASA – THE SLIM**^[7] – preferably on the Drop ASA
6. Connect the **Drop ASA – THE SLIM**^[7] and the **T15 Lower Receiver** with the included extra long screws^[1]. (Step 2)

Additionally: A spare ASA O-Ring is included, because you can never have enough of those.


Optional: The **Rear Plate** can be replaced by a **Sling Plate Shaft** or **Eye Shaft**. (Not included.)

Anleitung

1. Lösen Sie die Schraube^[4] am **Rear Air Plug**^[3] und entfernen Sie den **Rear Air Plug**^[3] und die original **Rear Plate**^[2].
2. Lösen Sie die zwei Schrauben auf der Innenseite des **T15 Lower Receiver**, die den original **Rear ASA** mit dem Receiver verbinden.
ACHTUNG! Auf der Innenseite des original **Rear ASA** befindet sich der **Shroud Mounting Screw O-ring**^[6] – bitte nicht verlieren.
3. Setzen Sie den **Shroud Mounting Screw O-ring**^[6] in den **Drop ASA – THE SLIM**^[7] ein.
4. Installieren Sie nun wieder die **Rear Plate**^[2] und den **Rear Air Plug**^[3]. (Siehe 1.)
5. Legen Sie die Moosgummiplatte^[5] zwischen **Rear Plate**^[2] und **Drop ASA – THE SLIM**^[7] – am besten auf den Drop ASA.
6. Verbinden Sie den **Drop ASA – THE SLIM**^[7] mit dem **T15 Lower Receiver** unter Verwendung der beigelegten extra langen Schrauben^[1]. (Siehe 2.)

Zusatz: Es liegt ein zusätzlicher ASA O-Ring bei. Davon kann man nie genug haben.

Optional: Die **Rear Plate** kann durch eine erhältliche **Sling Plate Shaft** oder **Eye Shaft** ersetzt werden. (Nicht im Lieferumfang enthalten.)

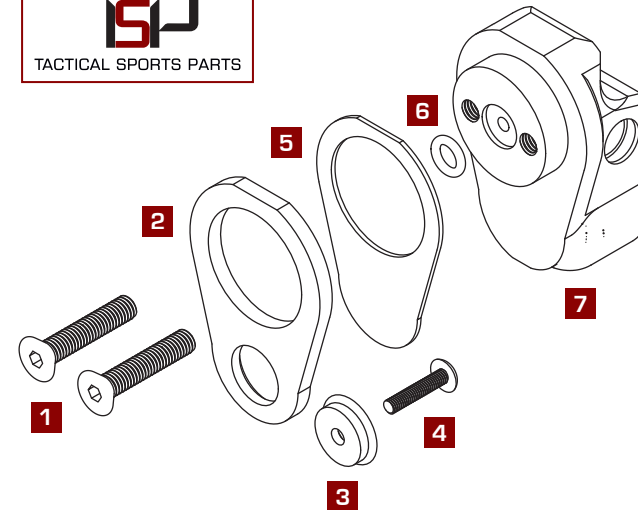

tacticalsportsparts.com

@tactical_sports_parts

/tacticalsportsparts

#TSPspotted